


# Instructions for Stool

We thank you for the trust you have placed in us by purchasing this product. Our main commitment is to offer excellent products, maintaining the strictest quality controls and complying with all current safety regulations, with the aim of presenting a perfect and safe product for domestic use.



Before you try to use the stool, please make sure the lock system on the bottom already at the unlock position, you can twist the small panel on the bottom to change the switch between 'lock' and 'unlock'.

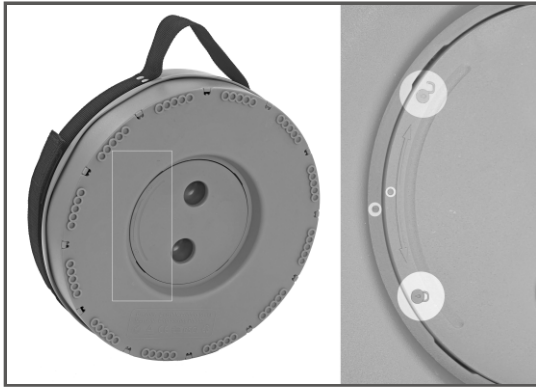


After you confirmed the lock system is in unlock condition, Place thumb and forefinger firmly in the two holes at both ends, and pull outward to a desired height, meanwhile twist clockwise slightly to ensure latches are locked into the slots. ( the detail in photo)



The stool can be adjusted to the desired height by slightly pulling both ends outwards to release the latches snaps from the slot locks, and twist it counter-clockwise, collapsing the unit and twist it clockwise to the adjust to desired height.



To close, pull both ends slightly outward to release the latches from the slots, and twist it counter-clockwise to close the stool. Then twist the small panel on the bottom side from 'unlock' to 'lock' to lock, make the stool in the closed position.

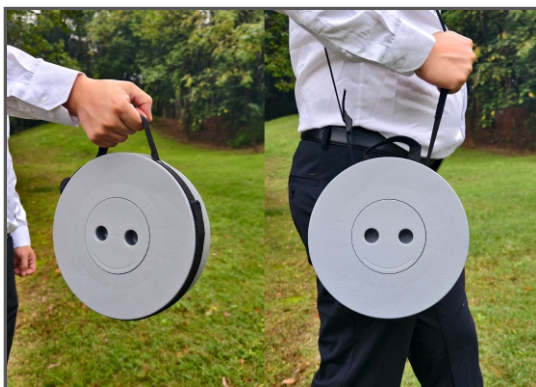

Your portable stool can be carried in several ways. Release the strap to carry on shoulder or just use handle strap attached to the stool itself as hand held.



Do not tilt the stool whilst sitting on it. Do not use stool on some ground that with very uneven rocks, and do not put stool too much close to fire.